

WD1500 wheel dolly can't lift the load

Adjustment of lifting capacity

Warning! It can be dangerous / associated with great risk of harming persons or equipment, to adjust the wheel dolly to be able to lift a load greater than, the manufacturer stated as max capacity (See machine plate / user manual).

1. Turn the screw (A) (See Fig 1 - 2) clockwise to increase the lifting force, one half round at the time.
You may have to do this several times.
2. Now check if the WD1500 can lift the wheel.
3. If the wheel dolly still can't lift the wheel, try to turn the spindle (B) (See Fig. 3 - 5) clockwise one whole turn at the time (max tree whole turns).
4. Check if the wheel dolly now can lift the wheel.
5. If the WD1500 still can't lift the wheel, you may contact your dealer.

Fig. 1

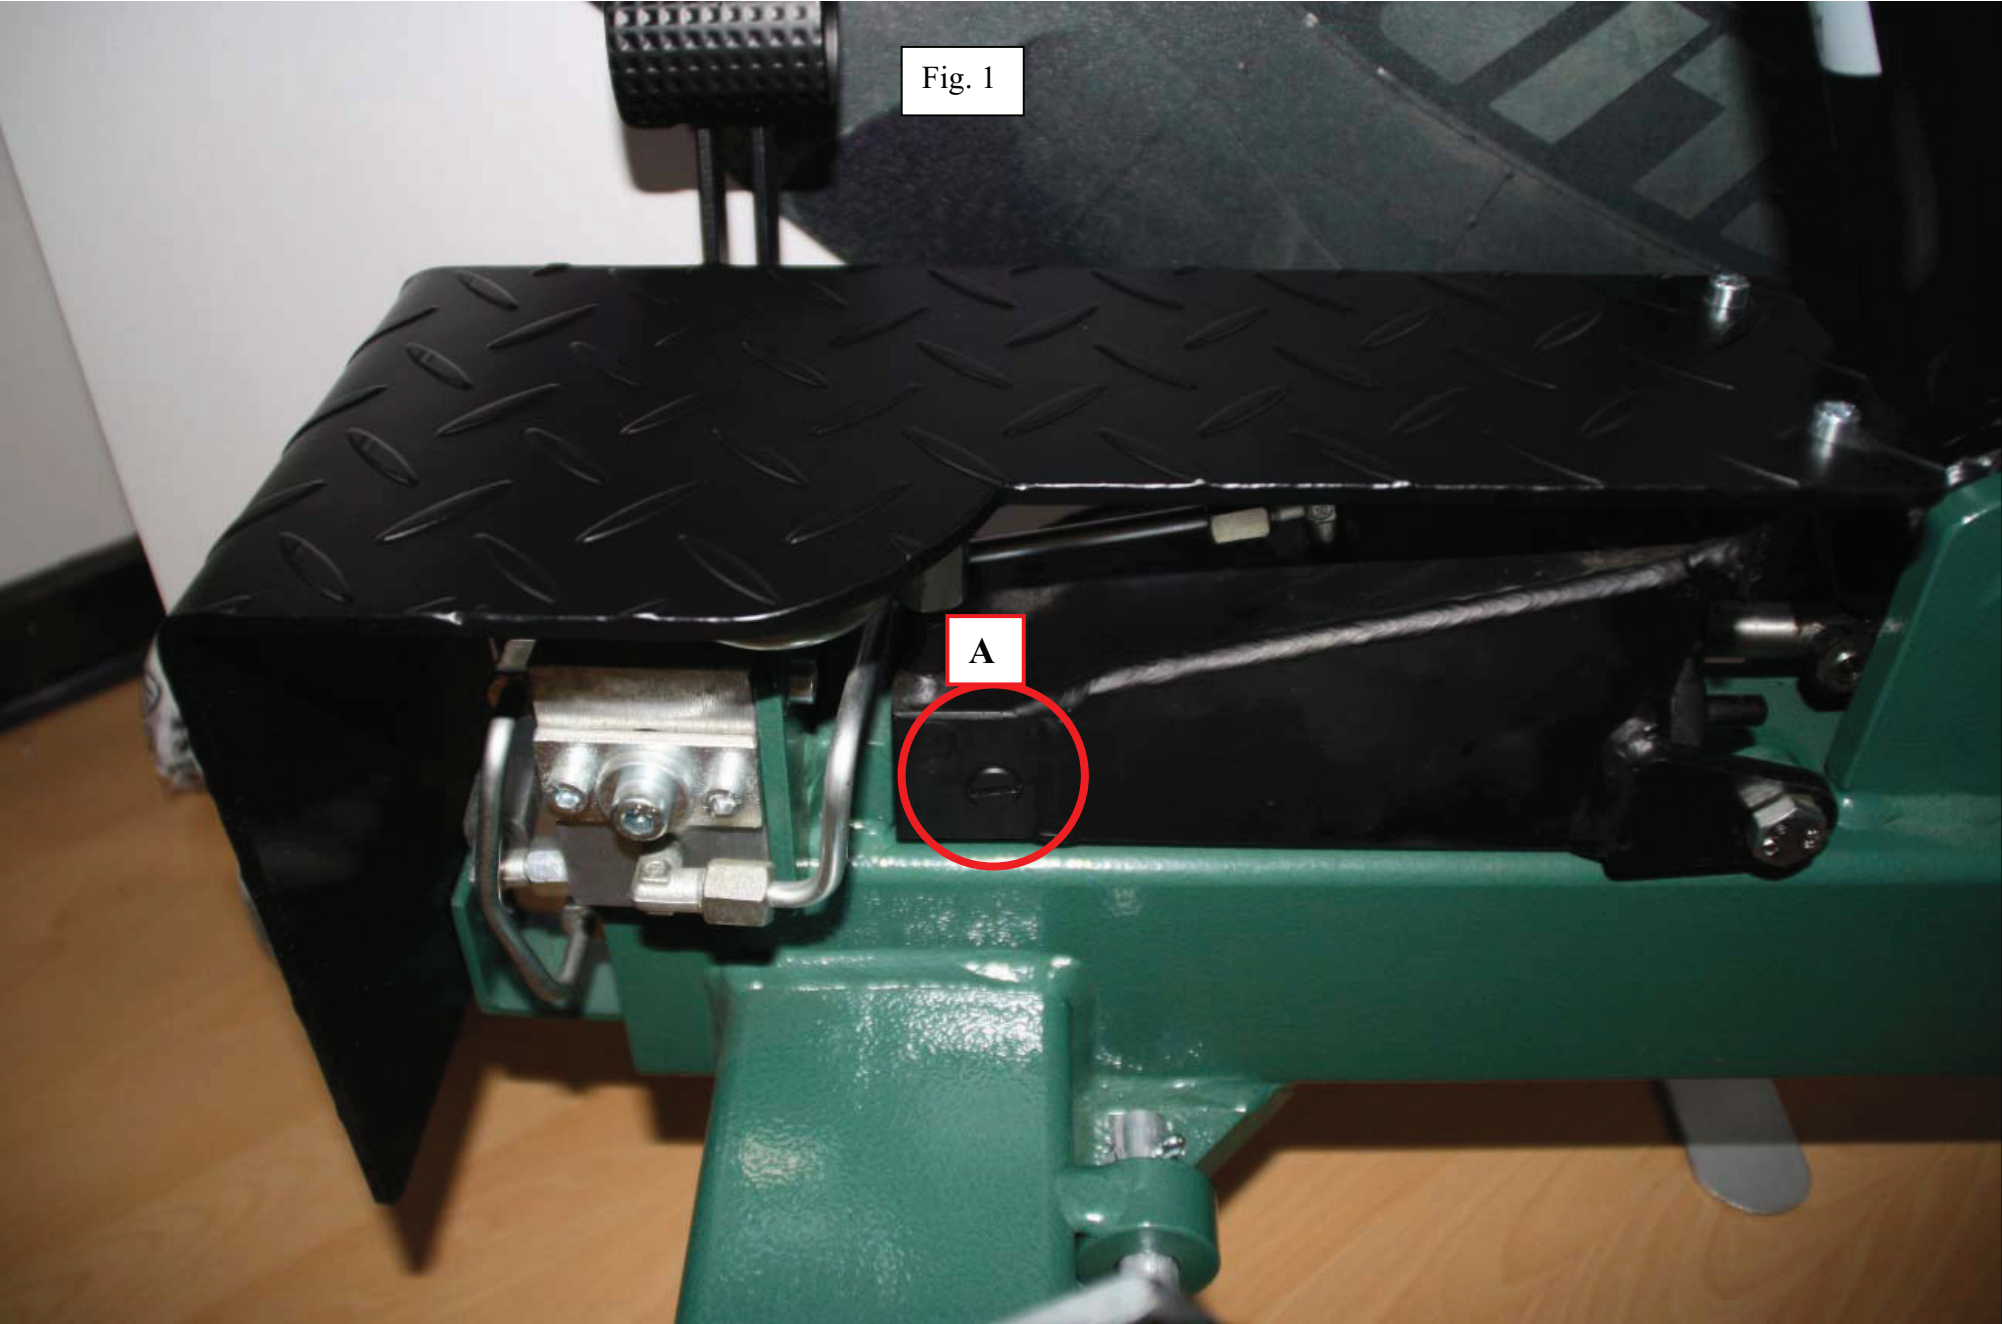


Fig. 2

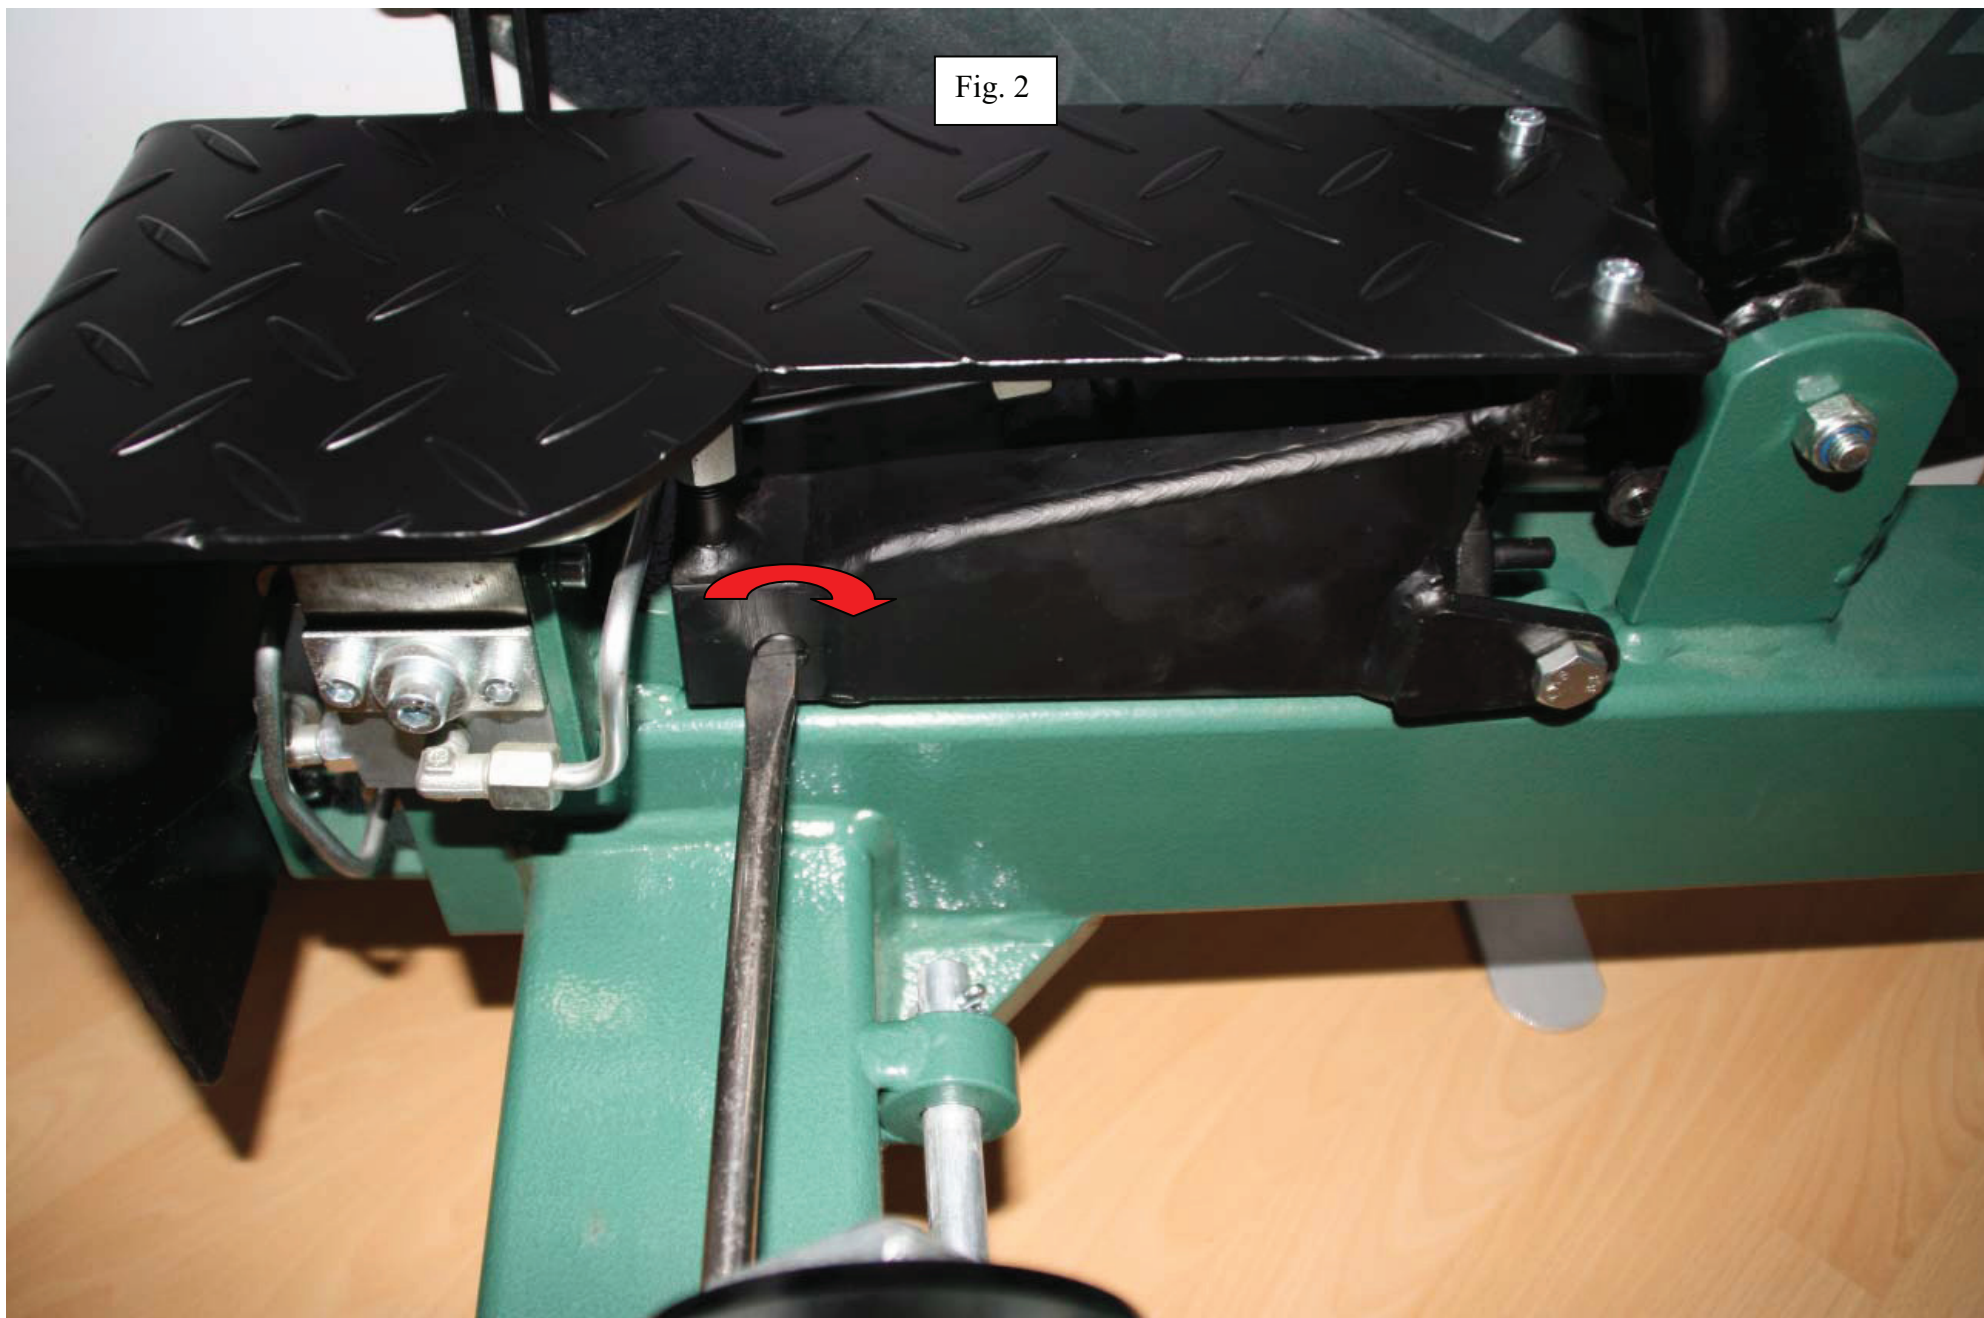


Fig. 3



Fig. 4



Fig. 5

